


Connect



Temperature Sensor

1. Isolate solar and battery.
2. Remove cover of Nomad.
3. Wire the Temperature sensor into the connector on the far right, with red (pin 4), yellow (pin 5) and blue (pin 6).
4. The Nomad will automatically detect and enable the temperature sensor.

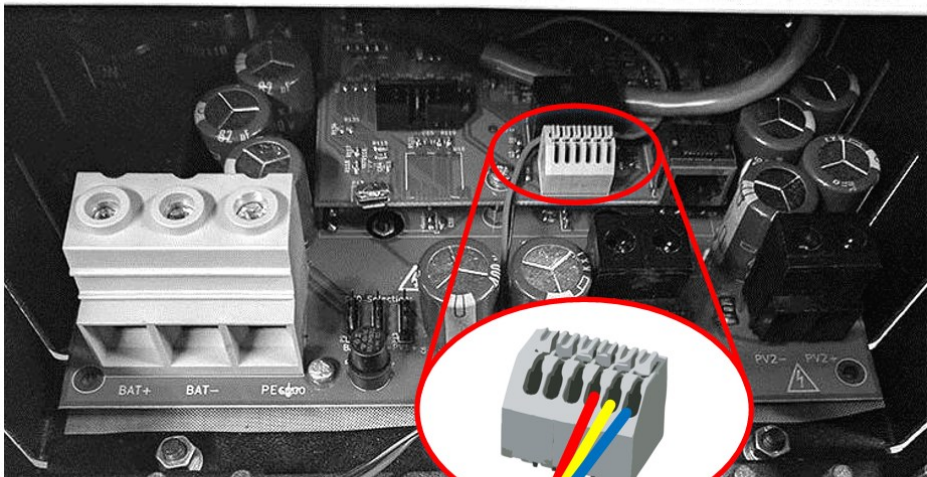

Safety Warning:

Ensure that PV and Battery is isolated before commencing work.

